


## SETTING

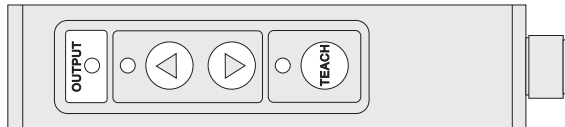

### Auto setting

STEP 1



STEP 2



Keeping press for 3sec. to reset the sensor.

LED of TEACH flashed, and then became constant lighting.



Press both keys for 6sec. to enter setting mode.

LED of sensitivity flashed, and then enter auto setting mode, put the labels into slot and draft it move forward and go back (At least 5 gaps) Until the LED became constant lighting, setting done.

PS. During the setting, labels can't be removed from slot of sensor.

### Manual setting

SENSITIVITY



Manual sensitivity micro adjustment.

Press one of both for 2sec. LED of sensitivity flashed to increase or decrease.

1) If not showed flashed, means already with Max. value.

NO/NC




Press last more than 6sec. to switch Normally open or Normally closed.

1) When LED flash showed release the key.

2) Before setting, need to remove labels of slot first.

## WIRING DIAGRAM

### NPN

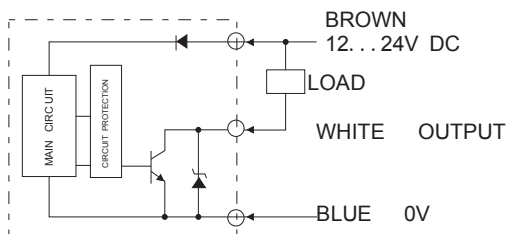

### PNP

